



INNOVATION. TECHNOLOGY. RELIABILITY.

T-Link Wireless

Model 06-5830 ID Reconfigure Kit

Rev B1



RaceAmerica Corporation
62 Bonaventura Drive
San Jose, CA 95134
(408) 988-6188
www.raceamerica.com
info@raceamerica.com

PACKAGE CONTENTS

This package contains three T-Link Reconfigure Jumpers labeled for their specific position (D, E or F) as used on a race course.

RECONFIGURING T-LINKS

T-Link identifier codes are preset at the factory for use in specific locations on the race course. Using an external Reconfig Jumper (06-5830), a T-Link's ID code can be changed enabling a single backup unit (ID C) to replace any unit with the same optimizer code.

To temporarily change the ID code of a T-Link unit, power the unit off. Select the Reconfig Jumper with the desired ID code (D, E or F) and install it into the T-Port

connector of the T-Link unit to be reconfigured. Power on the T-Link unit. The left LED will flash three short times to confirm the T-Link unit has been reconfigured to the new ID code. Unplug the Reconfig Jumper and connect any cables to the T-Link unit for normal use. Do not power off the T-Link unit after a new ID code has been assigned. The change of ID is temporary. When the T-Link unit is powered off, the ID code will revert back to the preset ID shown on the bottom of the T-Link unit.

These jumpers will work with any optimizer code, however, all T-Links in a network must have the same Optimizer Code. The Optimizer code can be found on the ID label on the bottom of the T-Link next to the ID code.

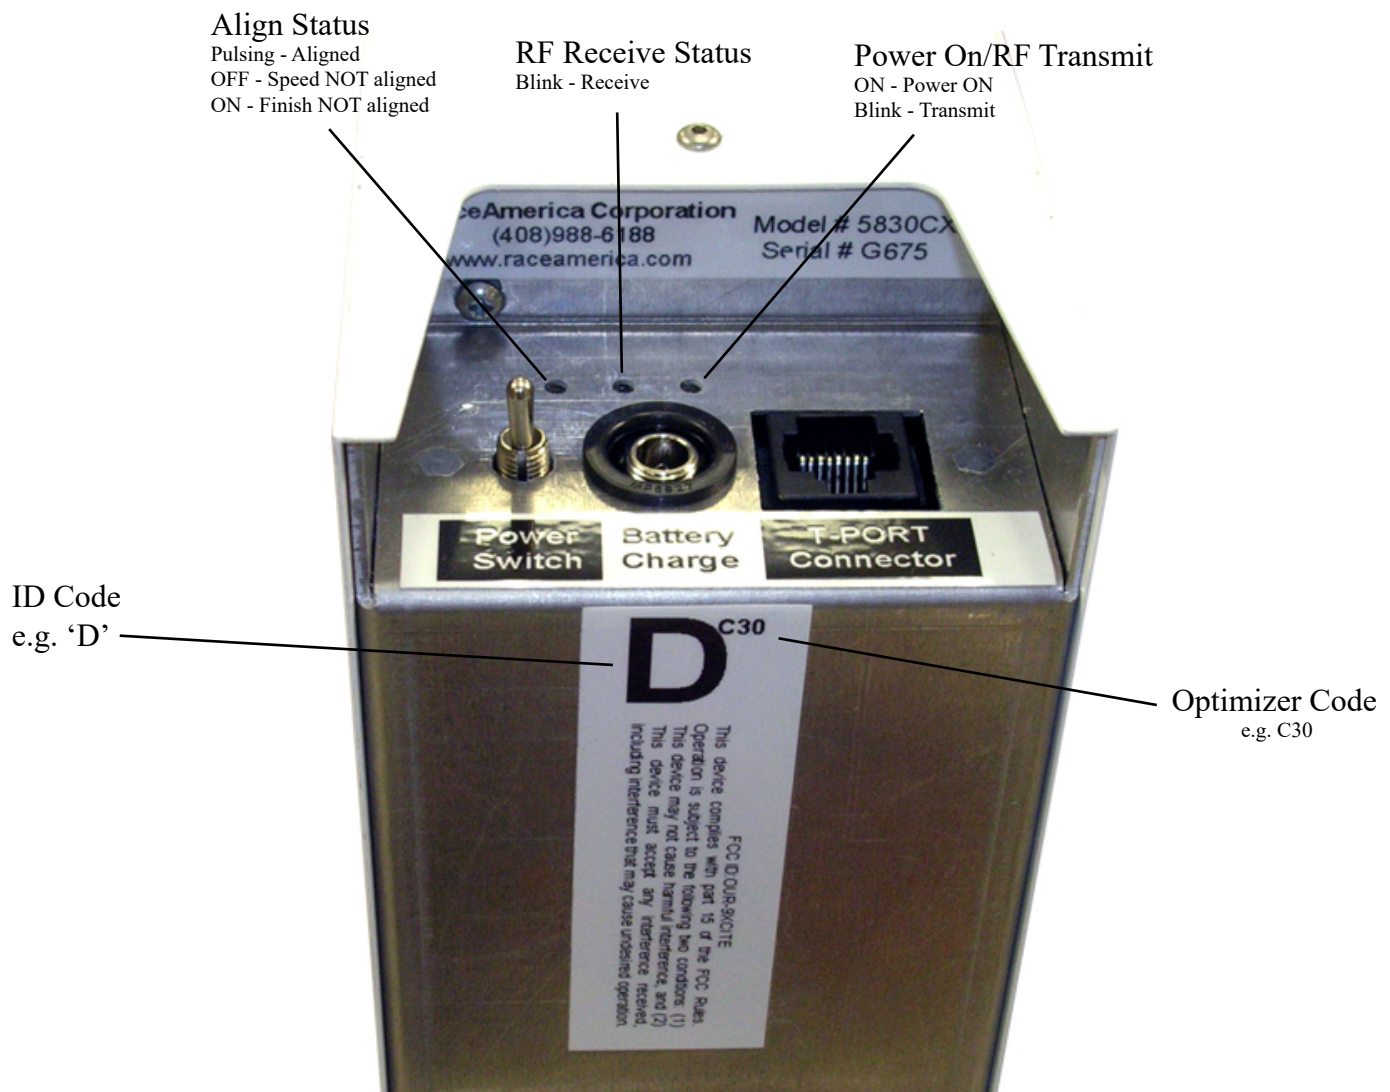


Figure 1 - T-Link power and external connections

REVISION HISTORY

- A - 09/08 - Initial release
- B - 11/08 - correct alignment diagram