

# Mounting Instructions for 4590B and 4592B Flat Panel Antennas

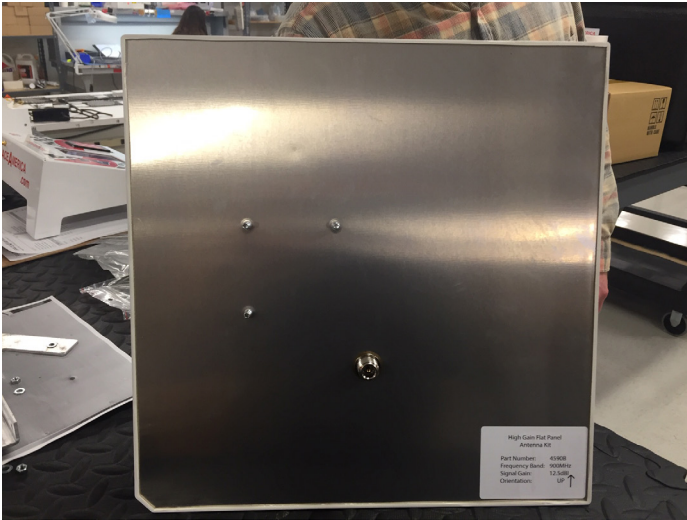


FIGURE 1

To assemble the pole mounting bracket on the flat panel antenna, position the antenna with the label in the lower right hand corner as shown in Figure 1.

Place the L-shaped mounting plate on the three studs as shown in Figure 2. Do not attach with nuts at this time.

Assemble the two metal brackets with the U-shaped threaded rod using the included nuts. Tighten the nuts holding the brackets and L-shaped plate to the antenna.

Slide the antenna over the post and tightened the remaining nuts finger tight to allow adjustments of direction and tilt angle. Once the final direction and tilt angle are made, tighten the nuts to secure the positioning.

Attach the antenna cable and the flat panel is ready for use with other vertical polarity antennas.



FIGURE 2



FIGURE 3



FIGURE 4